




185-G2

【operating manual】

A Package details


 x12	 x6	 x4
 x2		
Motherboard screw	The power screw	HDD screw
Copper pillar		

B Schematic diagram of wire interface

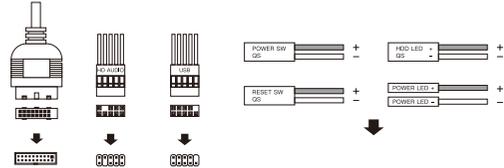


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

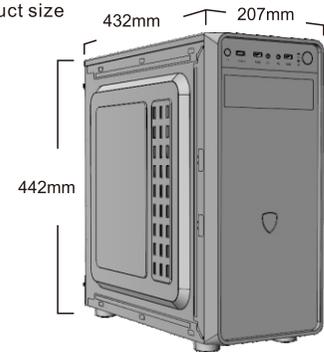


D IO panel

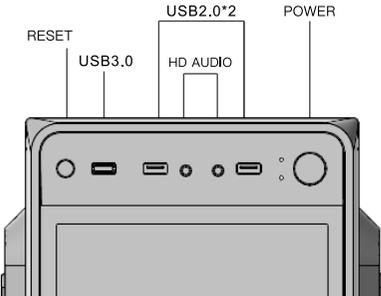


E Machine overview

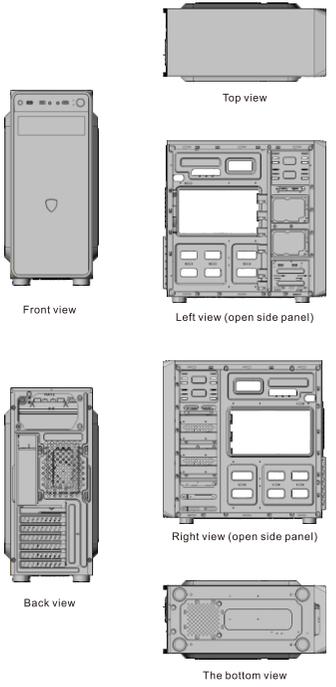

F Chassis disassembly diagram

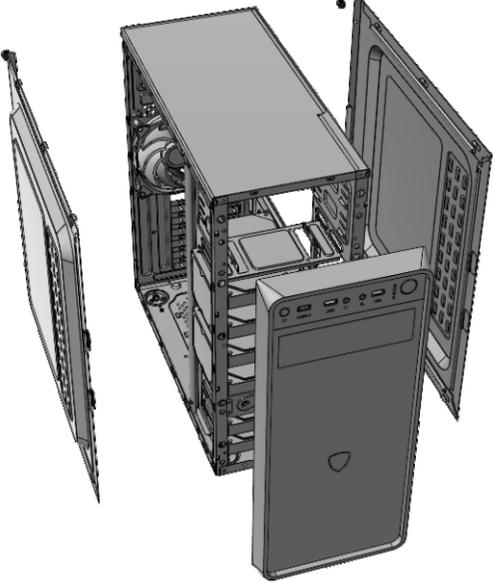


G Remove and install glass side panels

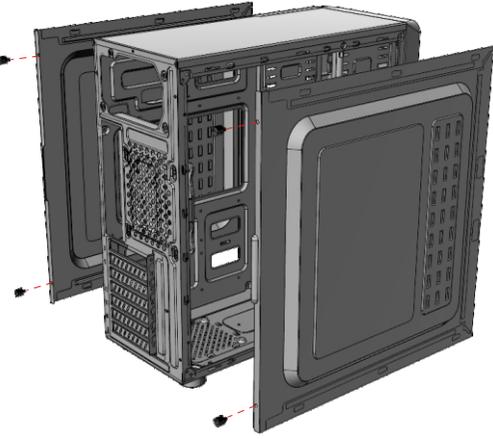


Metal side plate installation: buckle the side plate and fix it with two screws

H The power supply installation

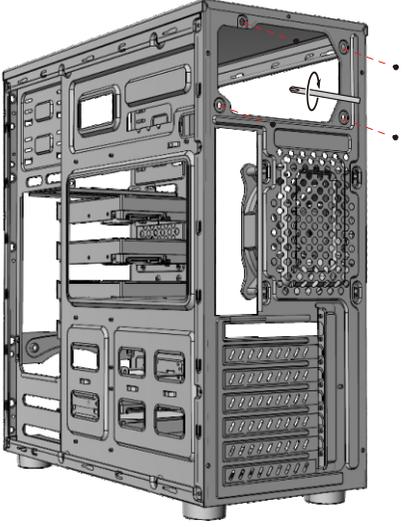

The power supply can be fixed by aligning the screw in the figure to the hole position
 Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

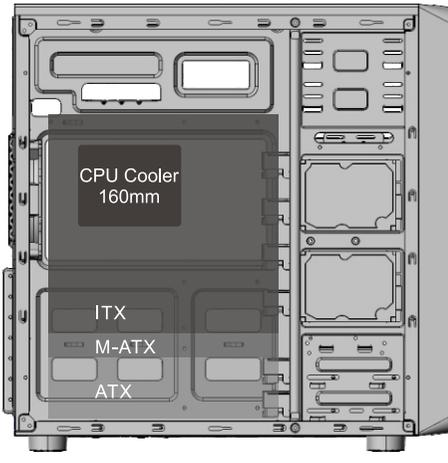

According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
 CPU Height limit: 160mm

